




## Istruzioni di montaggio

Assembly instruction  
Instructions de montage  
Montageanleitung  
Instrucciones de montaje

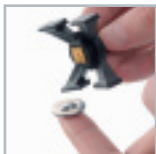

1




2



3



4

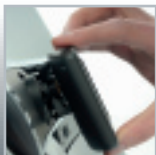

5



6

WWW.TETRAX.IT

MADE IN ITALY



## Assembly instructions

- Clear the rear device surface with a damp cloth or paper and dry;
- The package contains two clip models, the shimmed one for TomTom navigator mod. GO and the normal one for other models. Pick the right clip and rest it on Tetrax XWay, leaving the part with the adhesive free (photo 1, photo 2);
- Remove the clip adhesive film;
- Adequately press the Tetrax XWay against the device for about 10 seconds so that the clip 3M adhesive perfectly adheres to the surface (photo 3);
- Remove Tetrax XWay and make sure the clip is well-adhered to the device;
- Place Tetrax XWay on the car vent, turning it until the clamps are adequately tightened, without forcing. For a tight fit, complete the last nut turn with the Tetrax XWay arms (foto 4);
- Near the Tetrax XWay device clip, the four magnets' force of attraction will do the rest (photo 5)

## Attention

To remove the satellite navigator, place three fingers on the upper part of the Tetrax XWay and your thumb on the bottom, as illustrated in photo 6. Simultaneously push your three fingers down while pushing your thumb up.

## Warnings

- Do not assemble or adjust Tetrax XWay while driving;
- Due to its size, it is not suitable for children under 5;
- Do not use for purposes other than those intended;
- Roughness or surface wrinkles may alter clip adhesion;
- Magnetic device: do not leave credit cards or other magnetic storage supports near Tetrax XWay since saved information may be cancelled;
- WARNING: particularly critical driving situations (i.e.: off-road or on particularly uneven roads), may compromise good Tetrax XWay operations.

Maximum load capacity: 300 g  
Warranty: 24 months

MADE IN ITALY